

CX 200 TOUR 18x20

STRING PATTERN

18 Mains

20 Cross

Please follow the direction of the picture.


Start mains at 1.

Tie off mains at 2.

Start cross at 3.

Tie off cross at 4.

Product Code: 10279363 - 65

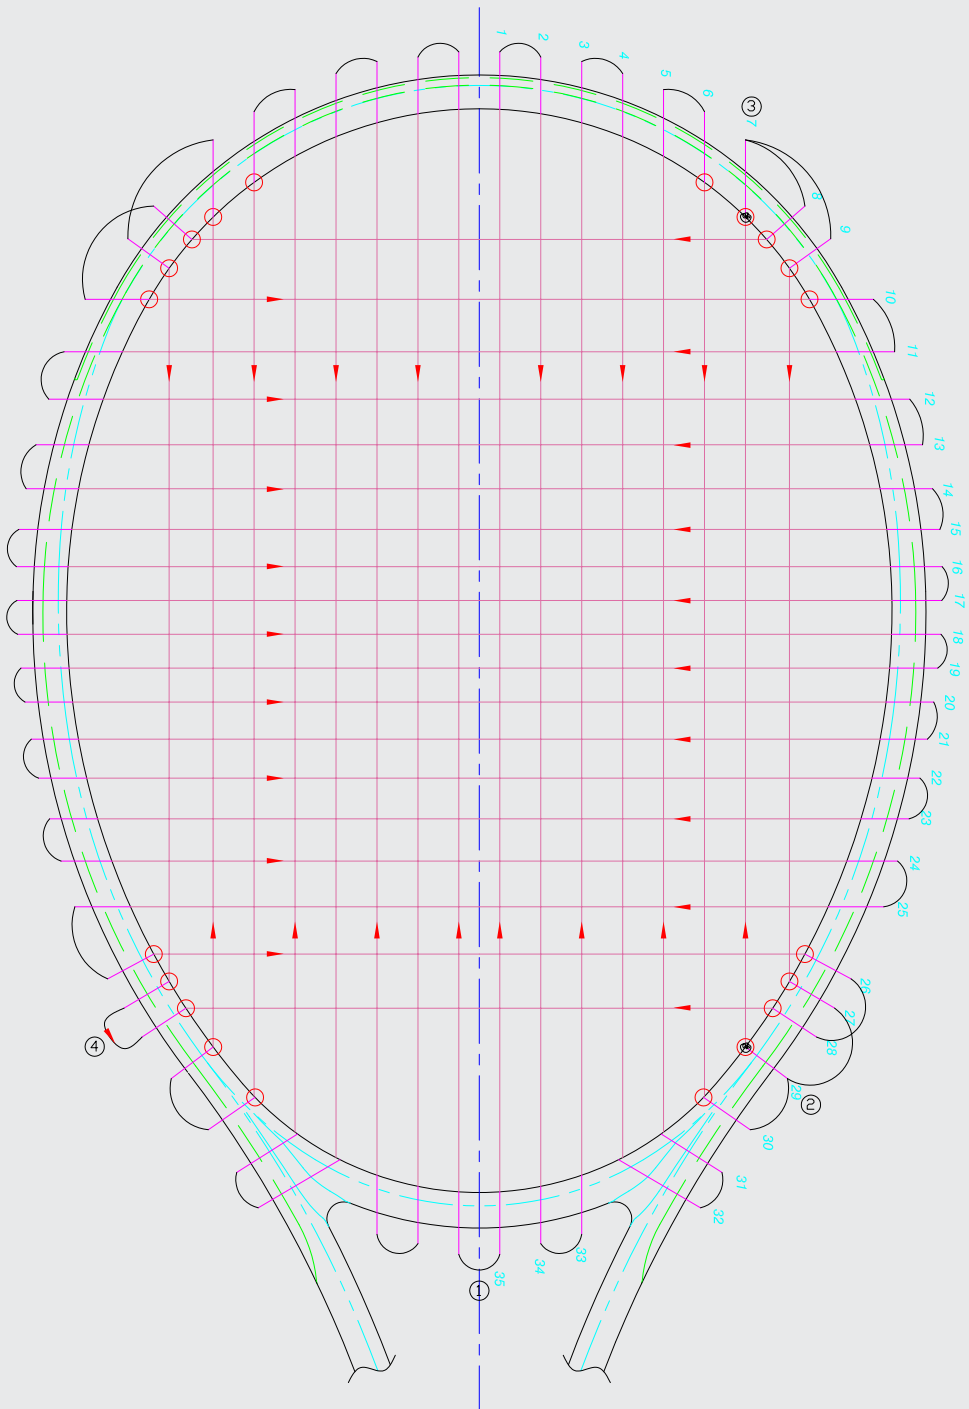

CX 200 TOUR 16x19

STRING PATTERN

16 Mains

19 Cross

Please follow the direction of the picture.


Start mains at 1.

Tie off mains at 2.

Start cross at 3.

Tie off cross at 4.

Product Code: 10279367 - 69

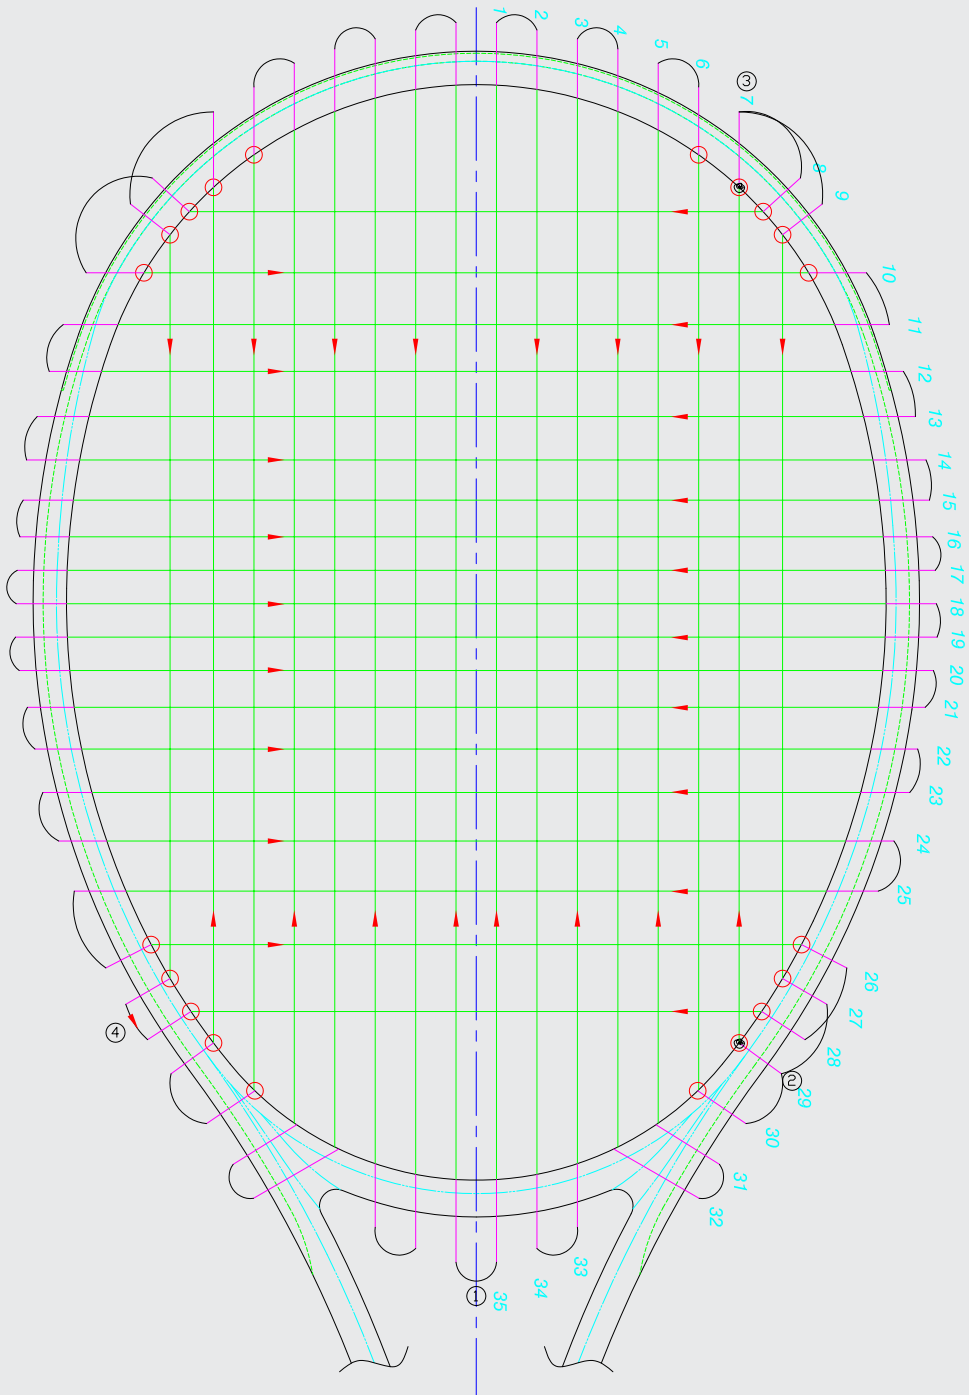

CX 200

STRING PATTERN

16 Mains

19 Cross

Please follow the direction of the picture.


Start mains at 1.

Tie off mains at 2.

Start cross at 3.

Tie off cross at 4.

Product Code: 10279371 - 73

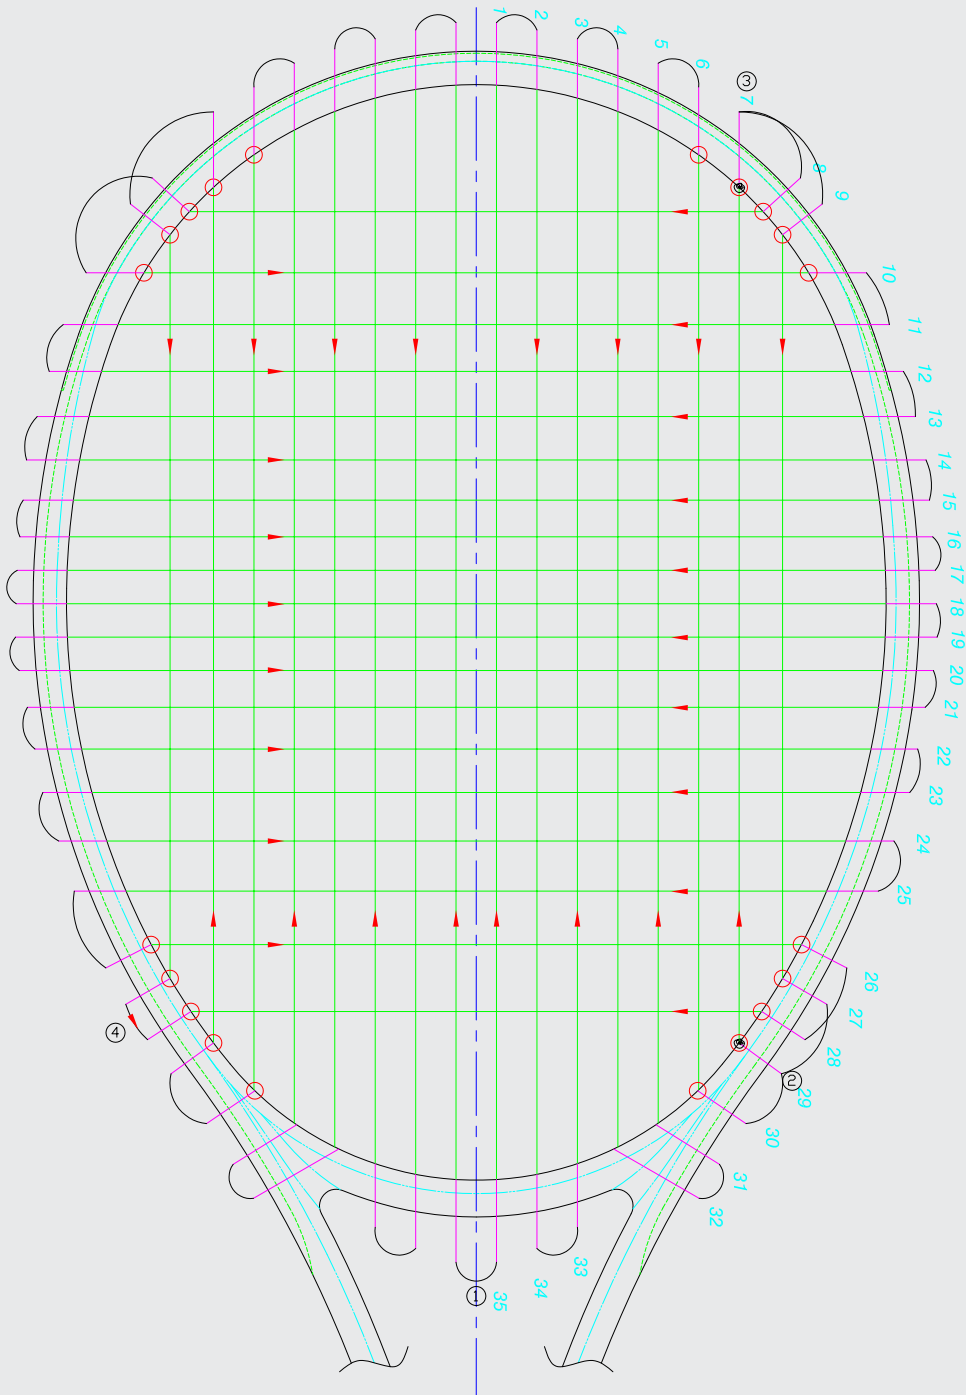

CX 200+

STRING PATTERN

16 Mains

19 Cross

Please follow the direction of the picture.


Start mains at 1.

Tie off mains at 2.

Start cross at 3.

Tie off cross at 4.

Product Code: 10279375 - 77

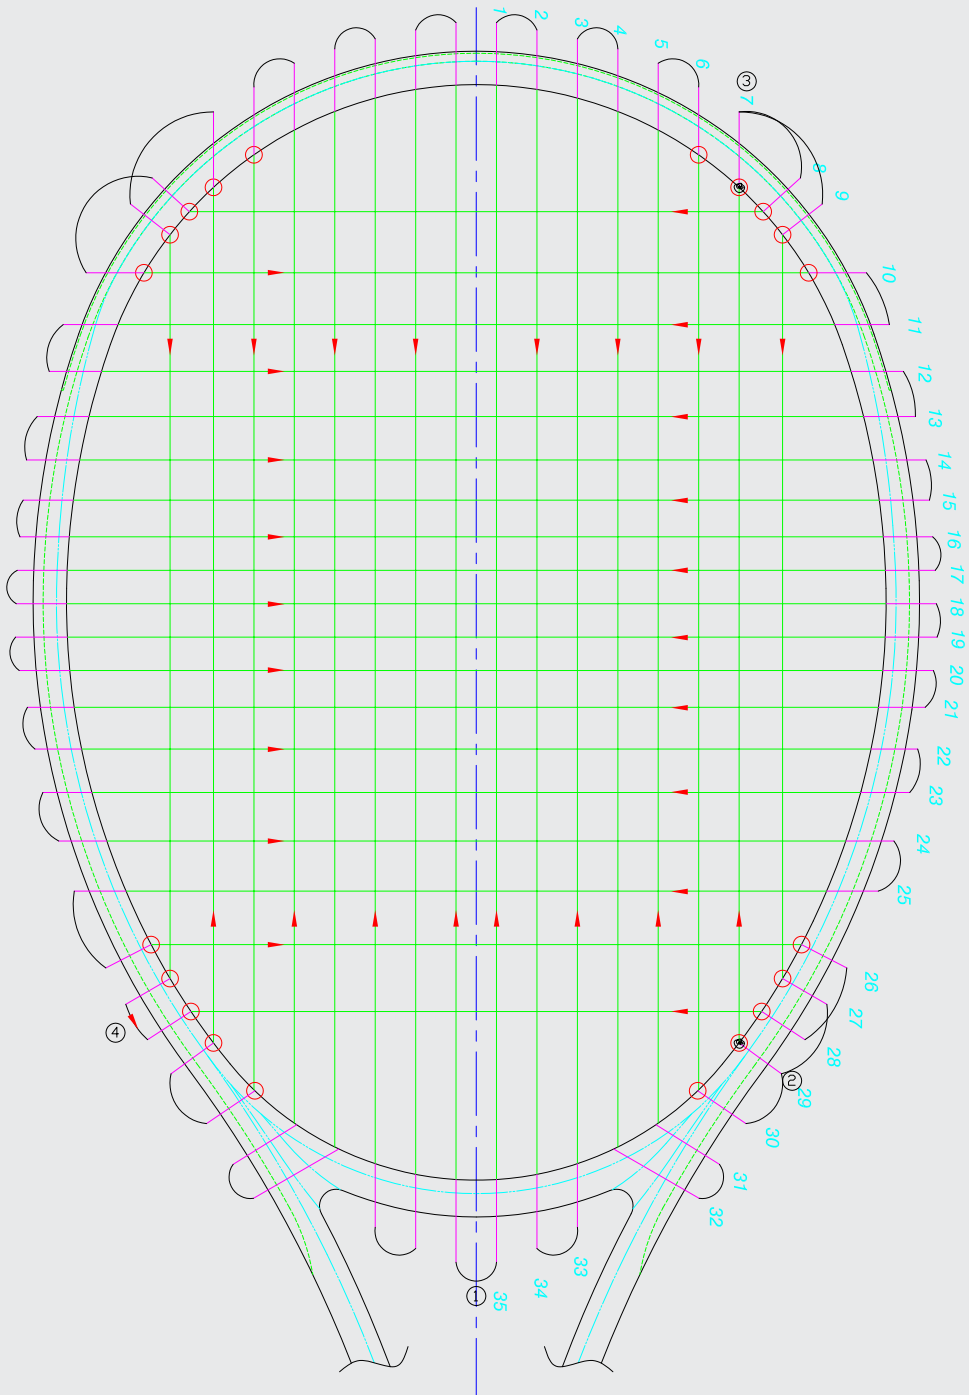

CX 200 LS

STRING PATTERN

16 Mains

19 Cross

Please follow the direction of the picture.


Start mains at 1.

Tie off mains at 2.

Start cross at 3.

Tie off cross at 4.

Product Code: 10279379 - 81

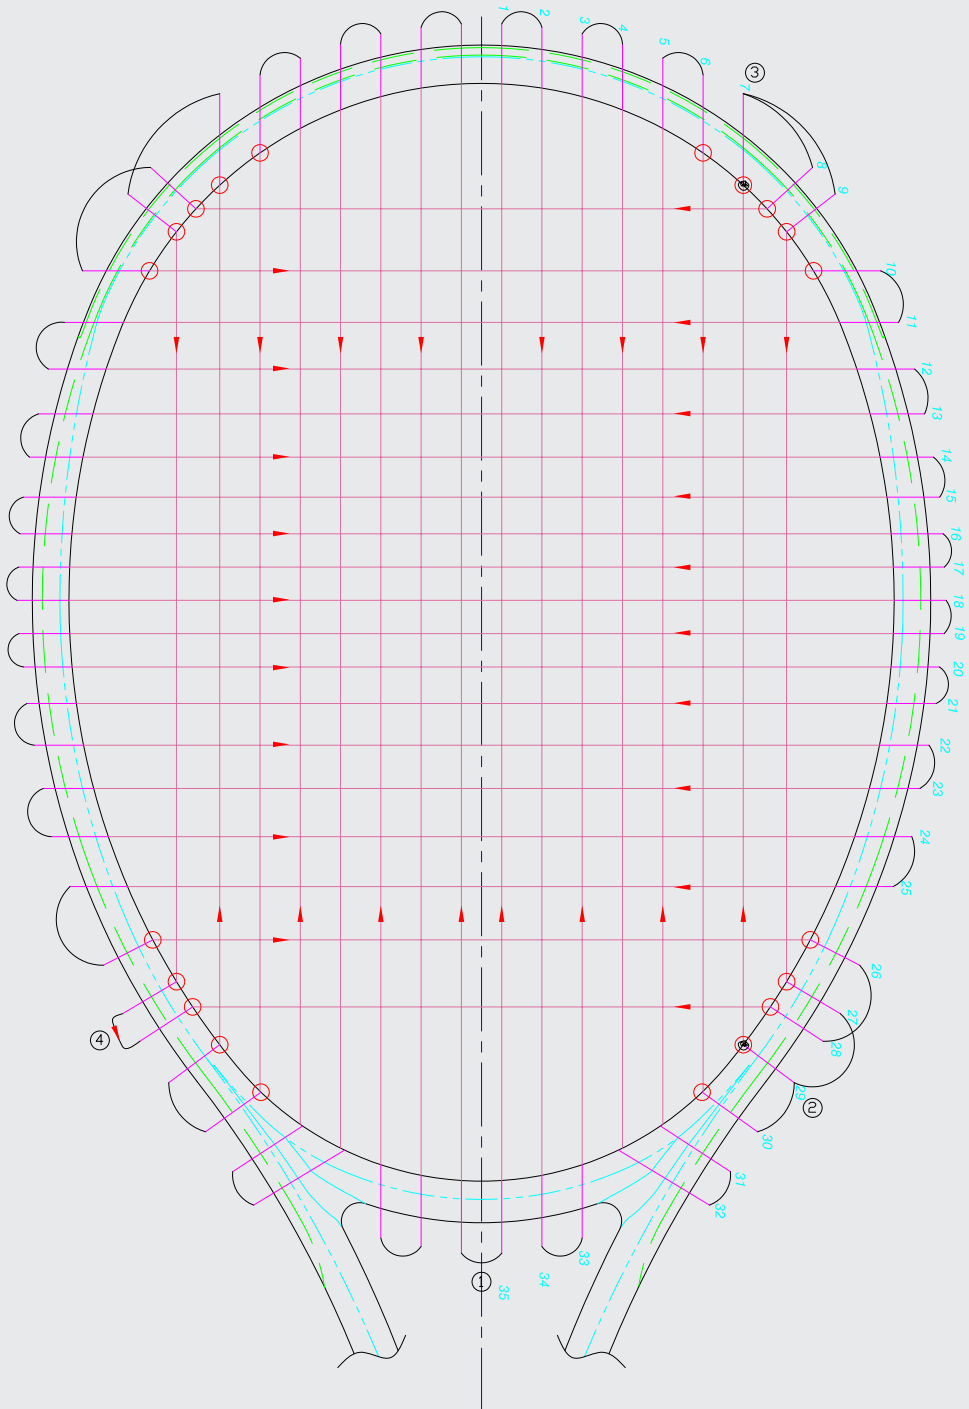

CX 400

STRING PATTERN

16 Mains

19 Cross

Please follow the direction of the picture.

Start mains at 1.

Tie off mains at 2.

Start cross at 3.

Tie off cross at 4.

Product Code: 10279383 - 86